

# Remote Controls

Foot, Hand and Fingertip Remote Controls 

## Foot Controls



**RFCS-14 HD (14-pin plug)\* 301589**  
Heavy-duty foot pedal current and contactor control provides increased stability and durability from larger base and heavier cord. Includes 20-foot (6 m) cord with plug.

**RFCS-6M (6-pin plug)**  
**301587** 13.25 ft. (4 m) cord  
**301588** 20 ft. (6 m) cord

*Same heavy-duty foot pedal as above, but for Maxstar® 161 STL and Maxstar 161 STH.*



**RFC-23 242199020**  
*For Dialarc® 250 AC/DC.* Foot pedal current and contactor control. Includes 20-foot (6 m) cords with plugs.  
*Note: Adapter no longer available.*



**RFCS-RJ45 300432**  
*For Diversion™ 165, Diversion 180 and Multimatic® 215.* Foot pedal current and contactor control. Includes 14-foot (4.3 m) cord with plug.

## Hand Controls



**RHC-14 (14-pin plug)\*\***  
**242211020** 20 ft. (6 m) cord  
**242211100** 100 ft. (30.5 m) cord  
Miniature hand current and contactor control. Dimensions: 4 x 4 x 3.25 inches (102 x 102 x 83 mm). Includes cord with plug.



**RHC-3 242210020**  
*For Dialarc 250 AC/DC.* Hand amperage control. Includes 20-foot (6 m) cord with plug.  
*Note: Adapter no longer available.*



**RHC-3GD34A 041122**  
*For Big Blue® 400 CC and 500 CC.* Hand amperage or voltage control. Includes 20-foot (6 m) cord with plug.



**PRHC-14 195511**  
Complete current or voltage control brings 120 volts of GFCI power to work area in a single cord. Housed in a durable and light aluminum case and includes 125-foot (38 m) cord with plugs.

\* Compatible with Miller power sources with serial numbers LG000000 and newer.  
For serial numbers before LG000000, please contact Miller Service.  
\*\* For Miller solid state power sources AFTER serial number JK674521.



**Miller Electric Mfg. LLC**  
An ITW Welding Company  
1635 West Spencer Street  
P.O. Box 1079  
Appleton, WI 54912-1079 USA

**Equipment Sales US and Canada**  
Phone: 866-931-9730  
FAX: 800-637-2315  
International Phone: 920-735-4554  
International FAX: 920-735-4125

**MillerWelds.com**



## Fingertip Controls



### RCC-14 (14-pin plug)\*\* 151086

East/west rotary-motion fingertip current and contactor control attaches to TIG torch using two hook-and-loop fasteners. Great for production or contractors that need quick ramp-up. Includes 26.5-foot (8 m) cord with plug.

### RCC-6M (6-pin plug) 301118

Same as above, but for Maxstar® 161 STL, Maxstar 161 STH and Multimatic® 200. Includes 13.25-foot (4 m) cord with plug.



### RCCS-14 (14-pin plug)\*\* 043688

North/south rotary-motion fingertip current and contactor control attaches to TIG torch using two hook-and-loop fasteners. Great for applications that require a finer amperage control. Includes 26.5-foot (8 m) cord with plug.

### RCCS-6M (6-pin plug)

**195184** 13.25 ft. (4 m) cord

**195503** 26.5 ft. (8 m) cord

Same as above, but for Maxstar 161 STL, Maxstar 161 STH and Multimatic 200.

### RCCS-RJ45 301146

For Diversion™ 165, Diversion 180 and Multimatic 215. Includes 13.25-foot (4 m) cord with plug.



### RMLS-14 (14-pin plug)\*\* 129337

Momentary- and maintained-contact rocker switch for contactor control. Push forward for maintained contact and backward for momentary contact. Includes 26.5-foot (8 m) cord with plug.



### RMS-14 (14-pin plug)\*\* 187208

Momentary-contact switch for contactor control. Rubber-covered pushbutton dome switch ideal for repetitive on-off applications. Includes 26.5-foot (8 m) cord with plug.

### RMS-6M (6-pin plug) 195269

Same as above, but for Maxstar 161 STL, Maxstar 161 STH and Multimatic 200.



### RPBS-14 (14-pin plug)\*\* 300666

Attaches to the TIG torch to remotely start and stop the TIG welding process. Includes 25-foot (7.6 m) cord with plug.

## Wireless Remote Controls



### Wireless Remote Foot Control 301580

For remote current and contactor control. Receiver plugs directly into

the 14-pin receptacle of Miller machine. 90-foot (27.4 m) operating range. See literature AY/6.5 for more information.



### Wireless Remote Hand Control 301582

For remote current, voltage and contactor control. Receiver plugs directly into the 14-pin receptacle of Miller machine. Up to 300-foot

(91.4 m) operating range. See literature AY/6.6 for more information.

## Extension Cables

### Extension Cables

**242208010** 10 ft. (3 m)

**242208025** 25 ft. (7.6 m)

**242208050** 50 ft. (15.2 m)

**242208080** 80 ft. (24.4 m)

**242208100** 100 ft. (30.5 m)

For 14-pin remote controls/24 VAC wire feeders. 14-pin plug to a 14-pin socket. (Not for 115-volt XR™ or 50 Series feeders.)

## Adapter Cords



### 14-Pin to 6-Pin Adapter Cord 300507

For Maxstar 161 STL, Maxstar 161 STH and Multimatic 200. 12-inch (305 mm) cord adapts Miller 14-pin foot control or fingertip control to a 6-pin plug.



### 10-Pin to 14-Pin Adapter Cord 301545

For Multimatic 235 and Multimatic 255. Allows standard 14-pin TIG remote controls to be used with the Multimatic 235 and 255.

### 14-Pin to 5-Pin Adapter Cord 130003

18-inch (457 mm) cord adapts Miller 14-pin foot control or fingertip control to a 5-pin plug.

### RJ45 to 14-Pin Adapter Cord 300688

12-inch (305 mm) cord adapts Miller RJ45 foot control or fingertip control to a 14-pin plug.

\* Compatible with Miller power sources with serial numbers LG000000 and newer. For serial numbers before LG000000, please contact Miller Service.

\*\* For Miller solid state power sources AFTER serial number JK674521.

Distributed by:

